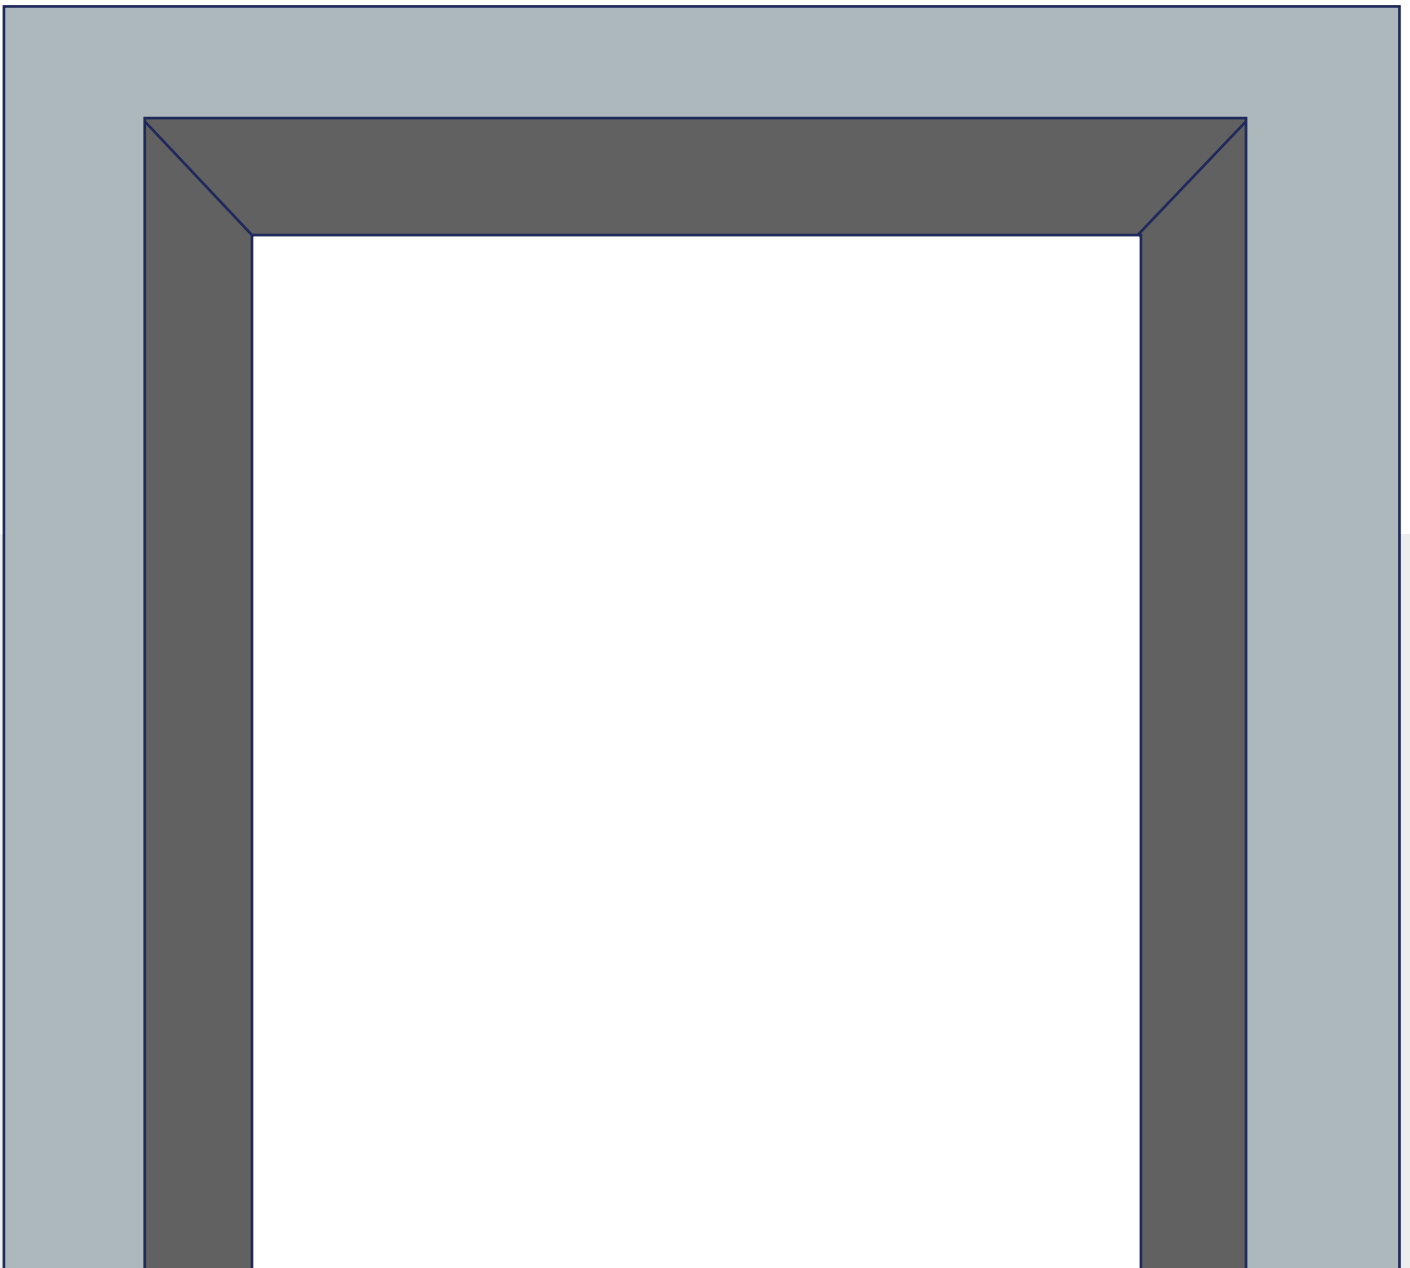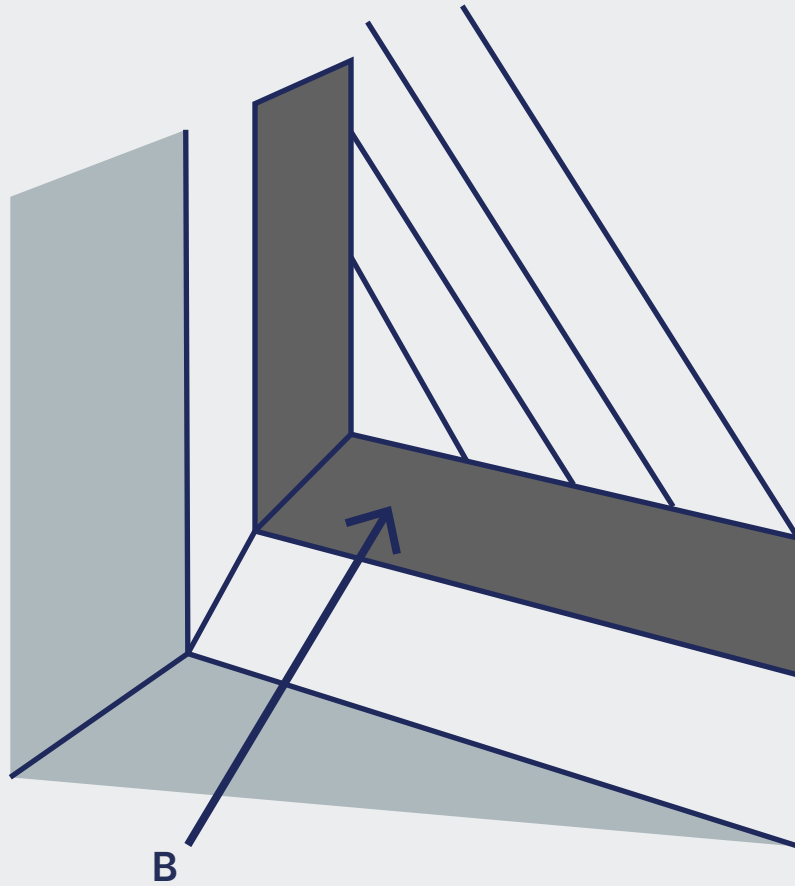# How to Measure For Integral Blinds

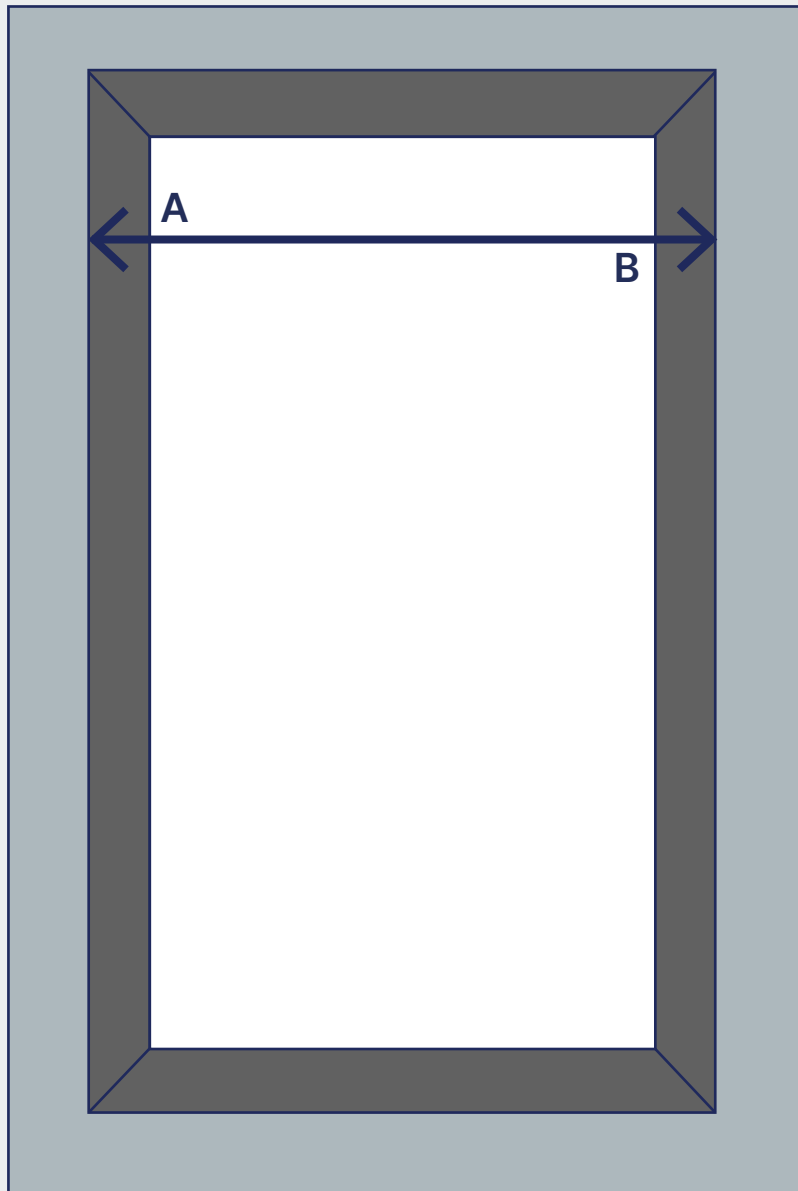**Measuring The Existing Double Glazed Unit for replacement Integral Blinds**
This guide will help you take your measurements accurately

Where to measure from
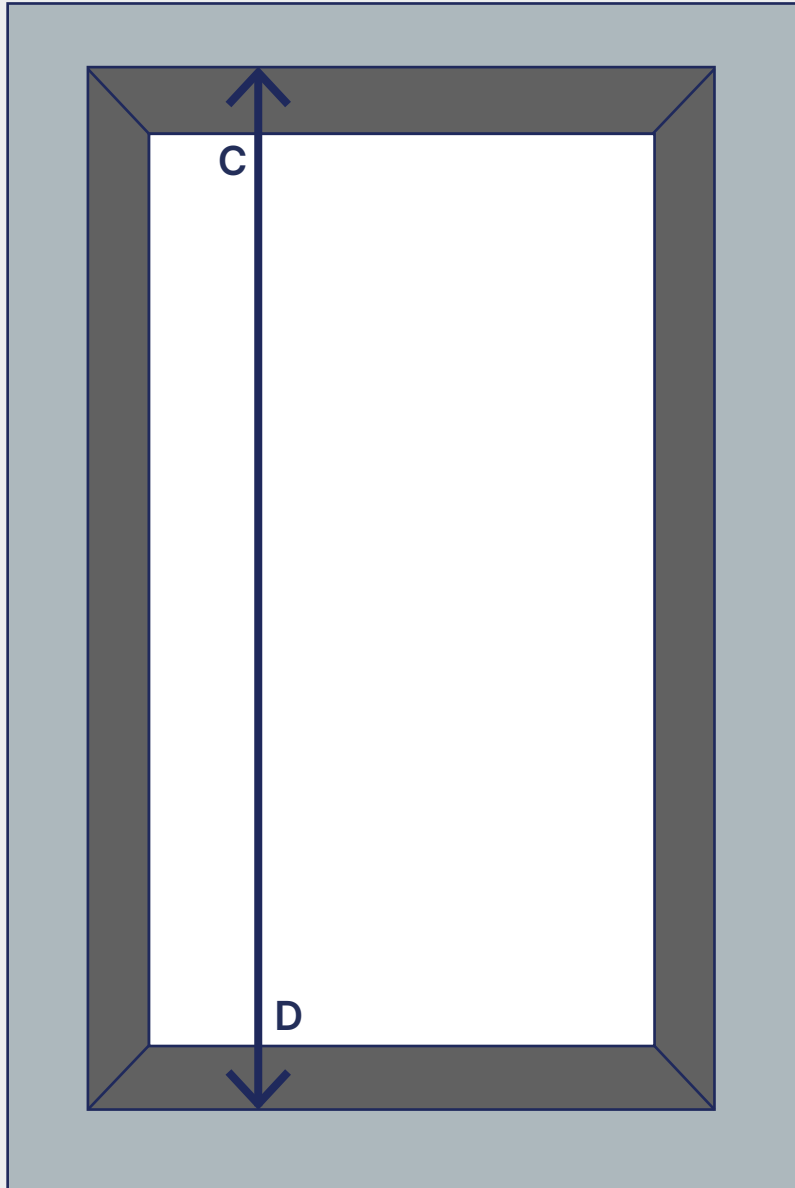
Always looking from inside the house/building.
Look at the bead (B) - the angled section that meets the windowpane.

Measuring width

You need to measure right from the external edge of the bead A to B in millimetres across the width, then deduct 10mm from your measurement.

When ordering qualified window fitters will always give the width first. This is the size of Double Glazing pane.

Measuring height

You need to measure right from the external edge of the bead C to D in millimetres across the height. Then deduct 10mm from your measurement.

Example: Measurement Width **A** to **B** is **860mm.**
Measurement Height **C** to **D** is **880mm.**

The window size that would be ordered is
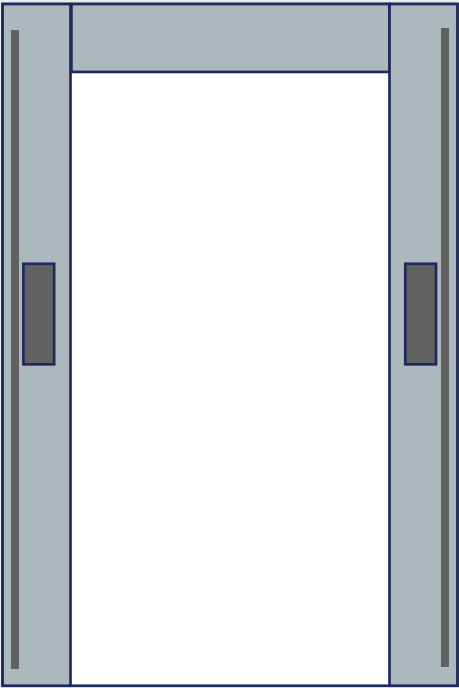**850 Width** and **870 Height** Double Glazing pane.

Measurment Guide

A	Can do	
X	Can't do	
A	The feeling of lifting is extremely heavy	

4mm		Width												
		230	300	400	500	600	719	800	900	1068	1100	1200	1300	1400
	mm	299	399	499	599	718	799	899	1067	1099	1199	1299	1399	1417
240	299	X	X	X	X	X	X	X	X	X	X	X	X	X
300	399	X	X	X	X	X	X	X	X	X	X	X	X	X
400	499	A	A	A	A	A	A	A	A	A	A	A	A	A
500	559	A	A	A	A	A	A	A	A	A	A	A	A	A
600	699	A	A	A	A	A	A	A	A	A	A	A	A	A
700	799	A	A	A	A	A	A	A	A	A	A	A	A	A
800	899	A	A	A	A	A	A	A	A	A	A	A	A	A
900	999	A	A	A	A	A	A	A	A	A	A	A	A	A
1000	1099	A	A	A	A	A	A	A	A	A	A	A	A	A
1100	1199	A	A	A	A	A	A	A	A	A	A	A	A	A
1200	1299	A	A	A	A	A	A	A	A	A	A	A	A	A
1300	1399	A	A	A	A	A	A	A	A	A	A	A	A	A
1400	1499	A	A	A	A	A	A	A	A	X	X	X	X	X
1500	1599	A	A	A	A	A	A	A	A	X	X	X	X	X
1600	1699	A	A	A	A	A	A	A	A	X	X	X	X	X
1700	1799	A	A	A	A	A	A	A	A	X	X	X	X	X
1800	1899	A	A	A	A	A	A	A	A	X	X	X	X	X
1900	1999	A	A	A	A	A	A	A	A	X	X	X	X	X
2000	2099	A	A	A	A	A	X	X	X	X	X	X	X	X
2100	2199	A	A	A	A	A	X	X	X	X	X	X	X	X
2200	2299	A	A	A	A	A	X	X	X	X	X	X	X	X
2300	2399	A	A	A	A	A	X	X	X	X	X	X	X	X
2400	2499	A	A	A	A	A	X	X	X	X	X	X	X	X

Height